

10IN1 PEN HEAT PRESS MACHINE

The press is equipped with a manual override, a digital display, and a sound signal at the end of work.

Our company makes easy and quick adjustment of pressure as a function of the press at any time.

Designed for printing pens.



COMPLY WITH THESE INSTRUCTIONS

1. Do not put the wire on heating plates cover.
2. Do not touch heating plates when it is connected to the power. Caution: Risk of Burns.
3. Do not open the machine box and make changes to the device.
4. Do not allow liquid or metal objects inside the hot press.
5. Make sure the machine is connected with a plug connected to the mass.
6. Don't pull the cable to disconnect the plug.
7. Power off the machine when finish using.
8. Use extreme caution when using near children.
9. Make sure that the device is used in an safe environment.

1.SET PRESSURE


1.1. Adjust pressure with knob in a clockwise direction to increase pressure and in the opposite direction to decrease by turning the knob.

2.SET TEMPERATURE & TIME


(Blue means temperature, white means time)

2.1. Press on the on / off switch located on the side of the heat press to be connected to the power.


2.2. Press once on the "SET", screen show "SP" on the display. Press "▼" or "▲" to set the desired temperature. (150 degree)

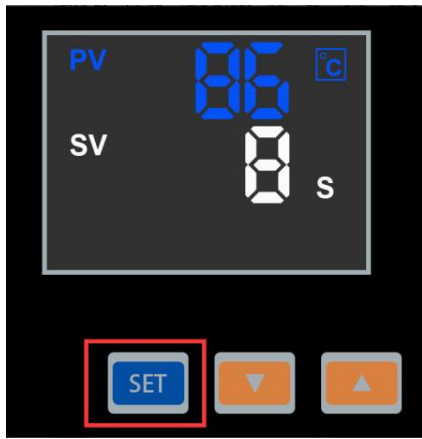

①

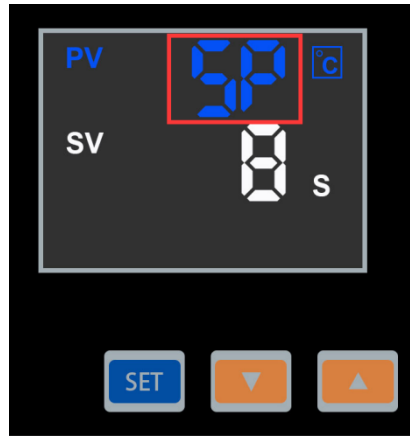


②

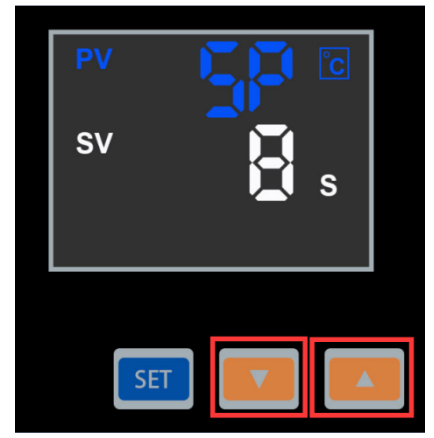


③. Press once again on "SET", screen show "St" on the display.


Press "▼" or "▲" to set the desired time. (15Seconds)

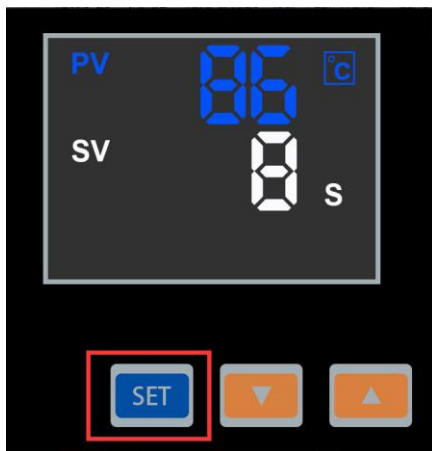

④

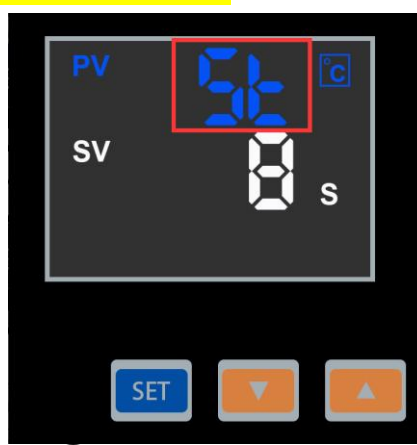

⑤

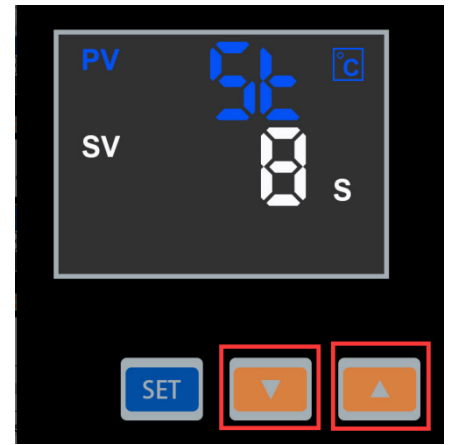

⑥

2.3. Press "SET" again after finish all setting to come out to the setting mode.

2.4. Put objects when the machine has reached the desired temperature, close heating plates, waiting time.

2.5. When time is up, machine will alarm, then lift heating plate, take out printing items.

3.Common Problem:

	Problem	Cause	Handling methods
1	Picture burning	Too much time or temp	Adjust time or temp.
2	Fails to heat up,but display well	Heating plate or Relay broken	Check the heating plate or Relay
3	Lack of color, faded image.	Insufficient temperature or time.	Adjust the temperature or increase the heating time.
4	Darkened, deep color; blur red image.	Pressed too long,temperature too high	Adjust the temperature or heating time.
5	No action after turn on power	Plug whether touch well Fuse whether burn	Check the plug and fuse
6	The real temp pass over setting temp	Relay broken	Replace the relay

4. For cleaning and maintenance of the products.

printed

- 4.1. Printed items can be washed 24 hours after printing.
- 4.2. Do not rub the printed image after printing.
- 4.3. Frequently wash items by washing machine can damage the image.
- 4.4. Avoid using cleaner or brush image.
- 4.5. Do not expose in the sun too long.